# POWERTECH



## **Owner's Manual**

Thank you for purchasing this product. Please read this manual carefully. It contains important operation instructions. Please keep this manual for later reference.

In addition to standard USB-A charging this charger is designed for USB-C enable devices and Quick Charge 3.0 enabled devices. It is compatible with most brands of smartphones, tablets, gaming consoles and new Type-C enabled laptops.

### Features

- Worldwide use Universal voltage 100-240V AC, 50/60Hz
- Supports PD 2.0 specifications, can charge up to 45WPD devices
- Compatible to Quick Charge 3.0, which delivers power up to 4x faster than regular conventional charger. Turbo charge your smartphones and tablets without decreasing your battery's lifespan
- USB-A ports are equipped with SMART Charging IC for Auto detection which will recognise most USB powered devices and provides their full charge current
- With LED power indicator
- Short Circuit & overload protection

#### Specifications

Input:	AC 100-240V 50/60Hz 1.5A max.
Output USB-C PD:	DC 5 / 9 / 12 / 15V 3A, 20V 2.25A 45W max.
Output QC 3.0:	DC 3.6-6V 3A / 6-9V 2A / 9-12V 1.5A 18W max.
Output USB-A x 2:	Each port DC 5V 2.4A max., 2 ports total 12W max.
Power: Accessory:	65W max. 1.2m AC Power Cord

# 65W High Capacity 4 Port USB Charging Station MP3418

Charging USB / USB-C Devices Important:

Check for voltage compatibility with your USB/USB-C PD device first

- 1. Before using, check the input voltage of your USB / USB-C PD device and output voltage of the Power Station to ensure they match. Make sure the total loading does not exceed the rated output current of this USB charger.
- 2. Connect your USB device and the USB port of the Power Station via a charging cable.

(To ensure complete safety and best performance, we strongly recommend using the original charging cable of your device)

- 3. Connect the supplied power cord to the Power Station first and then insert the AC plug into your wall socket (100-240VAC) and then the LED indicator will turn on.
- 4. The Power Station will detect the best charging mode and start charging your device automatically.
- 5. Your digital device should indicate the charging mode.
- 6. Unplug the Power Station from the mains when not in use.

#### **Important Safety Instructions**

- 1. Do not short circuit the output terminals.
- 2. Ensure correct voltage is used as continuous excessive voltage could damage your equipment.
- 3. Do not try to use this power supply with an appliance requiring more than the rated output current.
- 4. Do not attempt to open this unit.
- 5. Always switch off the digital device before you connect/disconnect this power station.
- 6. The socket-outlet should be installed near the equipment and should be easily accessible.
- 7. Remove from mains when not in use.