

Battery Type:

P = Lead-acid batteries L = Lithium battery F = Fe Battery

Standard Voltage for each Battery:

Lead-acid batteries-12V Lithium battery-3.7V Fe Battery-3.2V

How to Set:

- 1. Hold the Setting Key while powering the Tester to enter Battery Setting Mode.
- Press the Setting Key to select the battery type.
- Press the Switch Key to adjust the battery quantity.
- Hold the Switch Key to enter S1-S5 Selection Mode.
- Press the Setting Key to select from S1-S5, press Switch Key to Turn ON/OFF the selected Function.
- Power off to save the setting.