

[INDOOR DIGITAL THERMOMETER- HYGROMETER

Features:

Environment comfort display: “COMFORT”, “WET”, “DRY”

Temperature measuring range: 0°C ~ +50°C (+32°F ~ +120°F)

Temperature accuracy: ±1.0°C (±1.8°F)

Temperature resolution: 0.1°C (0.1°F)

Humidity measuring range: 10%RH ~ 90%RH

Humidity accuracy: ±5% (40% ~ 80%) other ±8%

Time/Temp./Humidity indicate.

°F and °C temperature switch function.

MAX&MIN Temperature and Humidity memory function.

Calendar, Alarm clock, announce hour and 12/24 hours system clock.

Function setting:

1. Basic functions: **MODE:** clock /alarm switch, and setting clock & alarm& calendar;**ADJ:** adjust the value of setting item, alarm on/off, date indicates.**MEMO:** indicates MAX/MIN temperature and humidity; **°C / °F :** °C / °F temperature switch; **RESET:** clear all the setting & memory, back to the original state.

2. Time and date setting: Press **MODE** for 3 seconds, the minute starts gleaming, pressing **ADJ** can adjust the minutes ,Press **MODE** once again to set up clock, press **ADJ** can adjust the clock, press **MODE** to set up month ,press **ADJ** can adjust the month ,press **MODE** again to set up date ,press **ADJ** can adjust the date .press **MODE** to confirm.

3. Alarm clock setting: Press [MODE] key to display the alarm clock time ,then press [MODE] 3 seconds, the minute starts gleaming, press[ADJ] to adjust the minute. Press [MODE] again once, the clock starts gleaming, press[ADJ] to adjust the clock. press [MODE] twice to confirm.

Alarm clock turn on /off: Press [MODE] to enter alarm clock states ,press ADJ,it will appear a alarm clock symbol , Press [ADJ], it will appear the announce hour symbol . Press [ADJ]once again, the alarm clock and announce hour symbol will appear synchronously ,it means that the alarm clock and announce hour function are turn on synchronously .Continue to press [ADJ] can be turn on or turn off the alarm clock, Press [MODE] to confirm.

4. Calendar display: At current clock mode, Press ADJ to display the date automatically, it will be back after 3 seconds.

5. MAX/MIN Humidity and temperature display: Press MEMO to display MAX/MIN humidity and temperature from the memory. Press the key for 2 seconds to clear the memory.

6. Environment comfort display: the “COMFORT ” character will appear when temperature is 20°C ~ 26°C (68°F ~ 78.8°F) and relative humidity is 50% ~ 70%RH. “WET” will appear at any temperature when relative humidity is higher than 70%RH.. “DRY” will appear at any temperature when relative humidity is below 50%RH.

Notice

1. Battery :AAA 1.5v .Put used battery back to the place where the government appointed.

2. Working environment temperature range:0°C ~ 50°C